

Type 8222 ELEMENT neutrino IO-Link / büS

Conductivity meter

Leitfähigkeitsmessgerät

Conductivimètre



Operating Instructions

Bedienungsanleitung

Manuel d'utilisation

We reserve the right to make technical changes without notice.
Technische Änderungen vorbehalten.
Sous réserve de modifications techniques.




© Bürkert SAS, 2022–2025


Operating Instructions 2502/02_EU-ML 00574525 Original EN

1. ABOUT THIS DOCUMENT	7	3.6. Dimensions	19
1.1. Manufacturer	7	3.7. Conductivity sensor	20
1.2. Symbols used	7	4. INSTALLATION	20
1.3. Terms and abbreviations	8	4.1. Unscrewing the cover on the connection box	20
1.4. Intended use	8	4.2. Fitting the cover to the connection box	21
1.5. Safety instructions	8	4.3. Installation on the pipe	22
2. PRODUCT DESCRIPTION	10	4.3.1. Device variant with a G 1 1/2" union nut	22
2.1. Product overview	10	4.3.2. Device variant with a G 3/4" external-threaded conductivity sensor	23
2.2. Product digital output	11	5. ELECTRICAL INSTALLATION	24
2.3. Conductivity sensor	11	6. IO-LINK COMMUNICATION	24
2.4. Type label	12	6.1. Safety instructions	25
3. TECHNICAL DATA	13	6.2. Communication table.....	25
3.1. Standards and directives	13	6.3. IODD	26
3.1.1. Conformity to the pressure equipment directive	13	6.4. Connection to the IO-Link master	26
3.1.2. UL certification	14	6.5. Setting and operation in IO-Link	26
3.2. Operating conditions	14	6.5.1. Home page	27
3.3. Fluid data.....	15	6.5.2. Identification	27
3.4. Electrical data.....	18	6.5.3. Parameter	28
3.5. Mechanical data.....	18	6.5.4. Observation	31
		6.5.5. Diagnostic	31

7. BÜS COMMUNICATION	33	10. SENSOR – MAINTENANCE	42
7.1. Safety instructions	33	10.1. Checking the output behaviour	42
7.2. Setting tools and setting software	33	10.2. Calibration	43
7.3. Description of the user interface	33	10.2.1. 1 point calibration	43
7.4. Available login user levels	34	10.2.2. Setting cell constant	44
7.5. Product functions and menus	34	10.2.3. Setting TDS cell constant	44
8. SENSOR – PARAMETER	35	10.2.4. Setting temperature offset	44
8.1. Choosing the type of temperature compensation	35	10.3. Configure calibration schedule	44
8.2. Setting parameter for each measured values	36	10.4. Resetting calibration data to factory default value	44
8.2.1. Set the filter response time of a measured value.....	36	11. GENERAL SETTINGS – PARAMETER	45
8.2.2. Activating the monitoring of measured values.....	37	11.1. Changing the operating mode of the device status indicator or switching off the device status indicator	45
8.2.3. Deactivating the monitoring of measured values.....	40	11.1.1. Changing the operating mode of the device status indicator	45
8.2.4. Changing the error limits, the warning limits and the hysteresis of the measured values	40	11.1.2. Switching off the device status indicator	46
8.3. Configure reaction of the device to specific events	40	11.2. Setting the basic parameters for identifying the device on bÜS	46
8.3.1. Activating the monitoring of an event	40	11.2.1. Entering a name for the device	46
8.3.2. Deactivating the monitoring of an event	41	11.2.2. Entering the location of the device	46
8.4. Resetting to factory default parameter data	41	11.2.3. Entering a description for the device	46
9. SENSOR – DIAGNOSTICS	41		

11.3. Setting the advanced parameters for identifying the device connected to bÜS or to a CANopen bus	47	12.3. Resetting errors counter	53
11.3.1. Entering a unique name for the device	47	12.4. Read the generated events	53
11.3.2. Changing the transmission speed on the device	47	13. GENERAL SETTINGS – MAINTENANCE	55
11.3.3. Changing the address of the device connected to a CANopen bus	48	13.1. Restart the product	55
11.3.4. Setting the digital communication for bÜS or for a CANopen bus	48	13.2. Reset the product to its factory settings	56
11.3.5. Stop sending the measured process data (PDOs) to bÜS or to the CANopen fieldbus	49	14. CALIBRATE THE DEVICE WITH A 7" PROCESS CONTROL DISPLAY TYPE ME61	56
11.4. Monitoring the supply voltage or the device temperature ...	49	14.1. Safety instructions	56
11.4.1. Reading out the 2 error limit values	50	14.2. Parametrizing the calibration function	57
11.4.2. Changing the 2 warning limit values	50	14.2.1. Preparation for defining the calibration action on the 7" Process Control Display Type ME61	57
11.4.3. Reading out the hysteresis value	50	14.2.2. Defining a displayed process value	58
11.5. Activating the diagnostics function	50	14.2.3. Configuring the calibration action	59
11.6. Disabling all the diagnostics	51	14.2.4. Using the calibration menu on the 7" Process Control Display Type ME61	60
11.7. PDOs configuration	51	15. PROCESS DATA OBJECTS	62
11.7.1. Set the transmission time between 2 values of a PDO .	51	15.1. Transmitted PDOs	62
11.7.2. Restore all PDOs to their default values	51	15.2. Structure of the PDO3	63
12. GENERAL SETTINGS – DIAGNOSTICS	52	16. MAINTENANCE	64
12.1. Reading out device status information	52	16.1. Cleaning the device	64
12.2. Reading out bÜS status information	53		

17. TROUBLESHOOTING	64
17.1. Messages  : failure, error or malfunction	64
17.1.1. Message büS is not operational	64
17.1.2. Message Factory data failure	65
17.1.3. Message Temperature failure	65
17.1.4. Message Sensor connection lost	65
17.1.5. Message Error: too low Conductivity	65
17.1.6. Message Error: too high Conductivity	65
17.1.7. Message Error: too low temperature	66
17.1.8. Message Error: too high temperature	66
17.1.9. Message Error: too low TDS	66
17.1.10. Message Error: too high TDS	66
17.1.11. Message Error: too low Resistivity	67
17.1.12. Message Error: too high Resistivity	67
17.2. Messages  : function check	67
17.2.1. Message Simulation mode active	67
17.3. Messages  : out of specification	67
17.3.1. Message Warning: too low Conductivity	67
17.3.2. Message Warning: too high Conductivity	68
17.3.3. Message Warning: too low temperature	68
17.3.4. Message Warning: too high temperature	68
17.3.5. Message Warning: too low TDS	68

17.3.6. Message Warning: too high TDS	69
17.3.7. Message Warning: too low Resistivity	69
17.3.8. Message Warning: too high Resistivity	69
17.4. Messages  : maintenance required	69
17.4.1. Message Calibration date has expired	69
18. SPARE PARTS AND ACCESSORIES	70
19. PACKAGING, TRANSPORT	70
20. STORAGE	70
21. DISPOSAL	70

1. ABOUT THIS DOCUMENT

The document is an important part of the product and guides the user to safe installation and operation. The information and instructions in this document are binding for the use of the product.

- Before using the product for the first time, read and observe the whole safety chapter.
- Before starting any work on the product, read and observe the respective sections of the document.
- Keep the document available for reference and give it to the next user.
- Contact the Bürkert sales office for any questions.



Further information concerning the product at country.burkert.com.

1.1. Manufacturer

Bürkert SAS

20, rue du Giessen
F-67220 TRIEMBACH-AU-VAL

The contact addresses are available at country.burkert.com in the menu Contact.

1.2. Symbols used



DANGER

Warns of a danger that leads to death or serious injuries.



WARNING

Warns of a danger that can lead to death or serious injuries.



CAUTION

Warns of a danger that can lead to minor injuries.

NOTICE

Warns of property damage that can damage the product or the installation.



Indicates important additional information, tips and recommendations.



Refers to information in this document or in other documents.

► Indicates an instruction to be carried out to avoid a danger, a warning or a possible risk.

→ Indicates a step to be carried out.



Indicates the result of a specific instruction.

Menu Identifies a text of a user interface.

1.3. Terms and abbreviations

The terms and abbreviations are used in this document to refer to following definitions.

Device Type 8222 ELEMENT neutrino.

2. SAFETY INSTRUCTIONS

2.1. Intended use

Use of the device that does not comply with the instructions could present risks to people, nearby installations and the environment.

The device is intended solely for the measurement of the conductivity of liquids.

- ▶ Use the device in compliance with the characteristics and start-up and use conditions specified in the contractual documents and in the Operating Instructions.
- ▶ Do not use the device for security applications.
- ▶ Store, transport, install and operate the device properly.
- ▶ Only operate a device in perfect working order.
- ▶ Only use the device as intended.

2.2. Safety instructions

This safety information does not take into account any contingencies or occurrences that may arise during installation, use and maintenance of the product.

The operating company is responsible for the respect of the local safety regulations including for the staff safety.



Risk of injury due to electrical voltage.

- ▶ If the device is installed either in a wet environment or outdoors, all the electrical voltages must be of max. 35 V DC.
- ▶ Before carrying out work on the system or the device, disconnect the electrical power for all the conductors and isolate it.
- ▶ All equipment connected to the device must be double insulated with respect to the mains according to the standard UL/EN 61010-1.
- ▶ Observe all applicable accident protection and safety regulations for electrical equipment.

Risk of injury due to pressure in the installation.

- ▶ Before any intervention in the installation, stop the circulation of fluid, cut off the pressure and drain the pipe.
- ▶ Before any intervention in the installation, make sure there is no pressure in the pipe.
- ▶ Observe the dependency between the fluid temperature and the fluid pressure.



WARNING

Risk of injury due to nonconforming assembly.

- ▶ The device must only be assembled by qualified and skilled staff with the appropriate tools.

Risk of injury due to unintentional switch on of power supply or uncontrolled restarting of the installation.

- ▶ Avoid unintentional activation of the installation.
- ▶ Guarantee a set or controlled restarting of the process subsequent to any intervention on the device.



Risk of burns due to high fluid temperatures.

- ▶ Use safety gloves to handle the device.
- ▶ Before opening the pipe, stop the circulation of fluid and drain the pipe.
- ▶ Before opening the pipe, make sure the pipe is completely empty.

Risk of injury due to the nature of the fluid.

- ▶ Respect the prevailing regulations on accident prevention and safety relating to the use of dangerous fluids.



Various dangerous situations

To avoid injury, observe the following instructions:

- ▶ Do not use the device in explosive atmospheres.
- ▶ Do not use the device in an environment incompatible with the device materials.
- ▶ Do not use fluid that is incompatible with the device materials. Find the compatibility chart on our homepage: country.burkert.com.
- ▶ Do not subject the device to mechanical stress.
- ▶ Do not make any modifications to the device.
- ▶ Prevent any unintentional power supply switch-on.



Various dangerous situations

To avoid injury take care:

- ▶ Only qualified and skilled staff may carry out the installation and maintenance work.
- ▶ Ensure a defined or controlled restarting of the process after a power supply interruption.
- ▶ Observe the general technical rules.

NOTICE

Elements and components that are both sensitive to electrostatic discharges

The device contains electronic components that are sensitive to electrostatic discharges. The components may be damaged if they are touched by an electrostatically charged person or object. In the worst case scenario, the components are instantly destroyed or go out of order as soon as they are activated.

- To minimise or even avoid all damage due to an electrostatic discharge, take all the precautions that are described in the EN 61340-5-1 norm.
- Do not touch any of the live electrical components.

3. PRODUCT DESCRIPTION

3.1. Product overview

The device is available in the following variants:

- device variant with a G 3/4" external-threaded conductivity sensor
- device variant with a G 1 1/2" union nut

Electrical connection is made over a 4-pin or 5-pin M12 male connector.

The device is composed of the following elements:

- A conductivity sensor with 2 electrodes that measures the liquid impedance in Ohm.
- A Pt1000 temperature probe which converts the temperature of the fluid into resistance (in Ω). The Pt1000 temperature probe is integrated in the conductivity sensor.
- An acquisition / conversion module of measured physical data. The module carries out following tasks:
 - Acquisition of the impedance measured in Ohm
 - Conversion of the measured impedance into conductivity units
 - Acquisition of the resistance measured and conversion into temperature.

3.2. Product digital output

The device can communicate via bÜS/CANopen or IO-Link.




- Devices with box in PPS and M12 connector in PA66 (see chapter 4.5) are dedicated to a use in IO-Link only.
- Devices with box in steel and M12 connector in Nickel-plated brass (see chapter 4.5) can be used either in IO-Link or in bÜS.

The device automatically switches from bÜS to IO-Link according to the master wired to it.

Depending on the master connected to the device, the status LED of the device shall blink orange at start:

- 4 times when a bÜS master is connected
- 2 times when a IO-Link master is connected.

After this, the device LED will indicate the NAMUR state of the device.

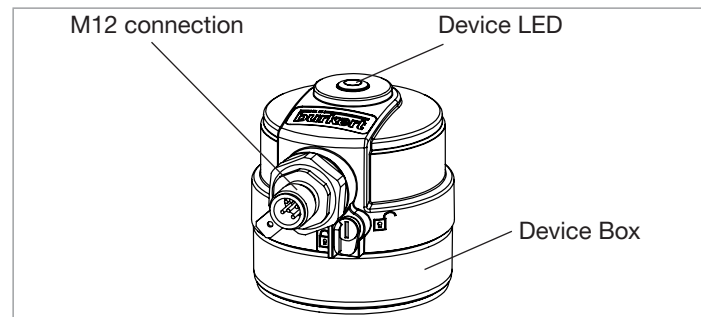

3.3. Conductivity sensor

The conductivity sensor is pinned together with the electronic module and cannot be dismantled.

An alternating voltage is applied to the electrode terminals: the current measured is directly proportional to the conductivity of the liquid.

3.4. Type label

1

2

3

14

13

12

11

10

9

8

7

6

5

4

Supply: 12-36V=,Max 1W Output:IO-Link or bus

Cell: C 0,01 Range 0,05-20 µS/cm


Fluid: 16Bar Temp 0...+50°C.


S/N 1003

FDA

IP65-67

00XXXXXX





us

W43AG

15

16

1

2

3

4

5

C/Q

L-

L+

8222 Conductivity Meter

IO-Link port Class A

1

2

3

4

5

CAN_H

GND

CAN_L

V+

Neutrino

CAN shield

1. Operating voltage

2. Power consumption

3. Output type

4. Measuring range

5. IP-Code

6. Fluid temperature

7. Manufacturing code

8. Conformity marking

9. Certification

10. Warning: Before using the device, take into account the technical specifications described in these Operating Instructions

11. Article number
12. Serial number
13. Nominal pressure of the fluid
14. Constant of the measuring cell
15. Type of the device and measured quantity
16. Pin assignment of the electrical connection

Fig. 1: Type labels of the device (example)

4. TECHNICAL DATA

4.1. Standards and directives

The device complies with the relevant EU harmonisation legislation. In addition, the device also complies with the requirements of the laws of the United Kingdom.

The harmonised standards that have been applied for the conformity assessment procedure are listed in the current version of the EU Declaration of Conformity/UK Declaration of Conformity.

4.1.1. Conformity to the pressure equipment directive

- ▶ Make sure that the device materials are compatible with the fluid.
- ▶ Make sure that the pipe DN is adapted for the device.
- ▶ Observe the fluid nominal pressure (PN) for the device. The nominal pressure (PN) is given by the device manufacturer.

The device conforms to Article 4, Paragraph 1 of the Pressure Equipment Directive 2014/68/EU under the following conditions:

- Device used on a pipe (PS = maximum admissible pressure in bar; DN = nominal size of the pipe in mm)

Type of fluid	Conditions
Fluid group 1, Article 4, Paragraph 1.c.i	$DN \leq 25$
Fluid group 2, Article 4, Paragraph 1.c.i	$DN \leq 32$ or $PS \times DN \leq 1000$
Fluid group 1, Article 4, Paragraph 1.c.ii	$DN \leq 25$ or $PS \times DN \leq 2000$
Fluid group 2, Article 4, Paragraph 1.c.ii	$DN \leq 200$ or $PS \leq 10$ or $PS \times DN \leq 5000$



- Device used on a vessel (PS = maximum admissible pressure in bar; V = vessel volume in L)

Type of fluid	Conditions
Fluid group 1, Article 4, Paragraph 1.a.i	$V > 1$ and $PS \times V \leq 25$ or $PS \leq 200$
Fluid group 2, Article 4, Paragraph 1.a.i	$V > 1$ and $PS \times V \leq 50$ or $PS \leq 1000$
Fluid group 1, Article 4, Paragraph 1.a.ii	$V > 1$ and $PS \times V \leq 200$ or $PS \leq 500$
Fluid group 2, Article 4, Paragraph 1.a.ii	$PS > 10$ and $PS \times V \leq 10000$ or $PS \leq 1000$

4.1.2. UL certification

Devices with variable key PU01 or PU02 are UL-certified devices and comply also with the following standards:

- UL 61010-1
- CAN/CSA-C22.2 n°61010-1

Identification on the device	Certification	Variable key
	UL-recognized	PU01
 Measuring Equipment EXXXXXX	UL-listed	PU02

4.2. Operating conditions

Ambient temperature	-10...+60 °C
Air humidity	< 85 %, without condensation
Operating condition	Continuous operation
Mobility of the device	Fixed device
Use	Indoor and outdoor ► Protect the device against electromagnetic interference, ultraviolet rays and, when installed outdoors, the effects of the climatic conditions.
<ul style="list-style-type: none"> • IP-Code • NEMA protection type <p>¹⁾ not evaluated by UL</p>	<ul style="list-style-type: none"> • IEC / EN 60529: IP67 ¹⁾ and IP65 ¹⁾ • NEMA 250: 4X and 6P <p>Mating connector must be wired and plugged.</p> <p>Cover of the connecting box must be fully tightened and locked.</p>
Degree of pollution	Degree 2 according to UL/EN 61010-1
Installation category	Category I according to UL/EN 61010-1
Maximum height above sea level	2000 m

4.3. Fluid data

Process connection	
<ul style="list-style-type: none"> Device variant with a G 3/4" external-threaded conductivity sensor 	<ul style="list-style-type: none"> Adapter with G 3/4" internal thread
<ul style="list-style-type: none"> Device variant with a G 1 1/2" union nut 	<ul style="list-style-type: none"> Type S022 adapter or Type S022 fitting
Fluid pressure	
<ul style="list-style-type: none"> Device variant with a G 3/4" external-threaded conductivity sensor 	PN16 ²⁾ The fluid pressure may be restricted by the fluid temperature and the material of the adapter used. Refer to Fig. 2 and Fig. 3 .
²⁾ not evaluated by UL	
<ul style="list-style-type: none"> Device variant with a G 1 1/2" union nut 	PN16 ³⁾ The fluid pressure may be restricted by the fluid temperature, the material of the union nut and the material from which the Type S022 is made. Refer to Fig. 2 , Fig. 4 and Fig. 5 .
³⁾ not evaluated by UL	
Fluid temperature	
<ul style="list-style-type: none"> Device variant with a G 3/4" external-threaded conductivity sensor 	The fluid temperature may be restricted by the fluid pressure and the material of the adapter used. Refer to Fig. 2 and Fig. 3 .

<ul style="list-style-type: none"> Device variant with a G 1 1/2" union nut 	The fluid temperature may be restricted by the fluid pressure, the material of the union nut and the material of the Type S022 used. Refer to Fig. 2 , Fig. 4 and Fig. 5
Conductivity measurement	
<ul style="list-style-type: none"> Measurement range Internal resolution Accuracy without temperature compensation 	<ul style="list-style-type: none"> 0.05 µS/cm...10 mS/cm 1 nS/cm ±3 % of the measured value
Temperature probe	Pt1000 integrated in the conductivity sensor
Temperature measurement	
<ul style="list-style-type: none"> Measurement range Accuracy 	<ul style="list-style-type: none"> -20...+125 °C ±1 °C
Temperature compensation	
	<ul style="list-style-type: none"> No compensation Linear compensation Compensation according to a predefined curve: NaCl or ultra pure water Reference temperature = 25 °C

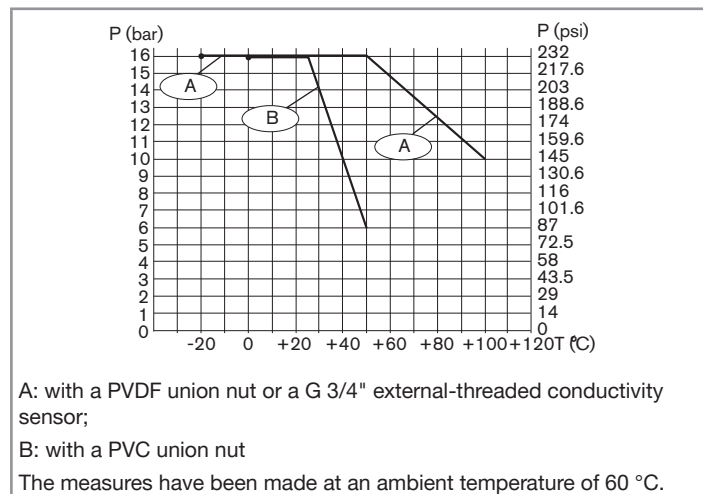


Fig. 2: Dependency between the fluid temperature and the fluid pressure, device variant with a PVC union nut, device variant with a PVDF union nut or device variant with a G 3/4" external-threaded conductivity sensor

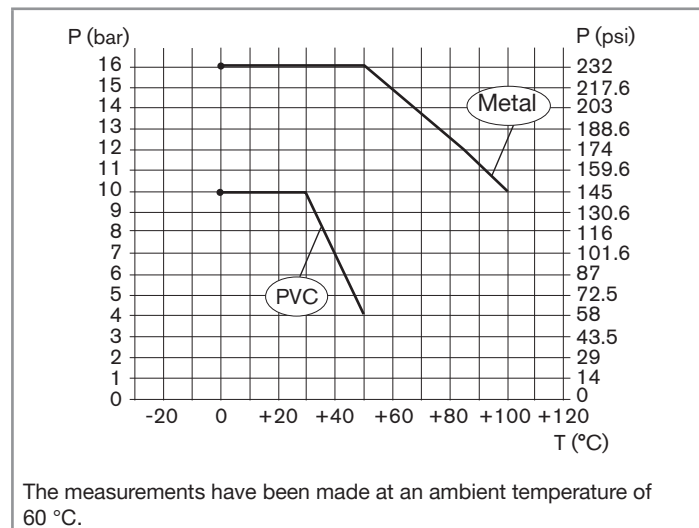


Fig. 3: Dependency between the fluid temperature and the fluid pressure, device variant with a G 3/4" external-threaded conductivity sensor and an adapter in PVC or metal

Type 8222 ELEMENT neutrino

Technical data

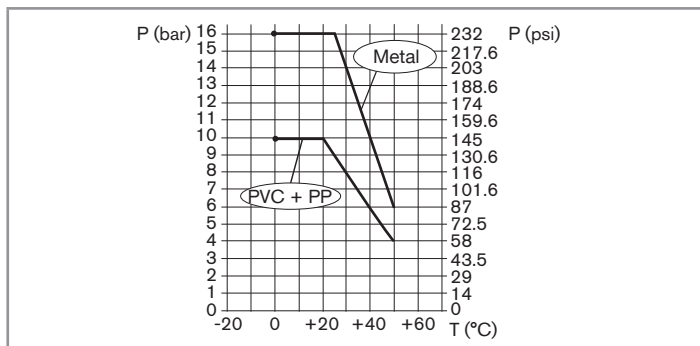


Fig. 4: Dependency between the fluid temperature and the fluid pressure, device variant with a PVC union nut, with Type S022 in metal, PVC or PP

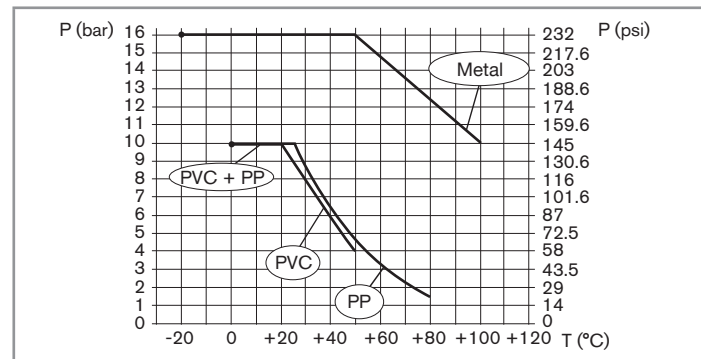


Fig. 5: Dependency between the fluid temperature and the fluid pressure, device variant with a PVDF union nut, with Type S022 in metal, PVC or PP

4.4. Electrical data

Operating voltage	<ul style="list-style-type: none"> • 12...36 V DC • Connection to main supply: permanent through external safety extra-low voltage (SELV) and through limited power source (LPS) • Filtered and regulated
Power consumption	< 1 W
Power source (not supplied)	<ul style="list-style-type: none"> • Limited power source according to UL/EN 60950-1 standards • or limited energy circuit according to UL/EN 61010-1, Paragraph 9.4
Protection against polarity reversal	Yes
Protection against voltage spikes	Yes
Digital output	büS / IO-Link V1.1.2

4.5. Mechanical data

Table 1: Materials without contact with the fluid, all device variants

Part	Material
Box / seals	Stainless steel, PPS / EPDM
Cover / seal	PPS / EPDM
M12 male connector / Seal	PA66 or Nickel-plated brass / EPDM
Grounding terminal	Nickel-plated brass
Light guide	PC and PMMA
Dimensions	Refer to the data sheet

Table 2: Materials without contact with the fluid, device variant with a G 1 1/2" union nut

Part	Material
Union nut	<ul style="list-style-type: none"> • PVC • PVDF on request

Type 8222 ELEMENT neutrino

Technical data

Table 3: *Materials in contact with the fluid, all device variants*

Part	Material
Armature of the conductivity sensor	PVDF
Pt1000	Stainless steel 1.4571 (316Ti)
Electrodes of the conductivity sensor C = 1	Graphite
Electrodes of the conductivity sensor C = 0.1 or C = 0.01	Stainless steel 1.4571 (316Ti)

Table 4: *Materials in contact with the fluid, device variant with G 3/4" external-threaded conductivity sensor*

Part	Material
Seal of the conductivity sensor	EPDM

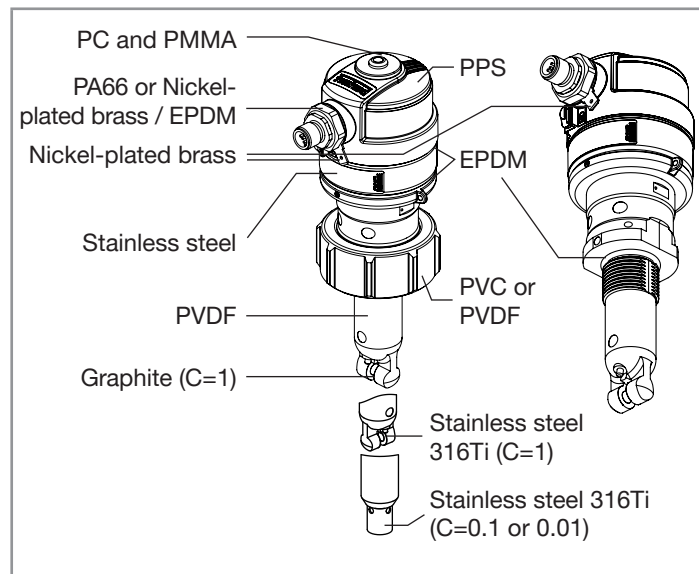


Fig. 6: *Device materials*

4.6. Dimensions

→ Refer to the data sheet of the device, available at:
country.burkert.com.

4.7. Conductivity sensor

Conductivity sensor C=0.01	
• Measurement range	• 0.05...20 $\mu\text{S}/\text{cm}$
• Type of fluid	• Ultra-pure water, pure water
Conductivity sensor C=0.1	
• Measurement range	• 0.5...200 $\mu\text{S}/\text{cm}$
• Type of fluid	• For example: pure water, industrial wastewater
Conductivity sensor C=1	
• Measurement range	• 0.005...10 mS/cm
• Type of fluid	• For example: industrial wastewater, wastewater


5. INSTALLATION

5.1. Unscrewing the cover on the connection box

NOTICE

The tightness of the device is not guaranteed when the cover is removed.

- Take all the precautions to prevent the projection of liquid inside the housing.

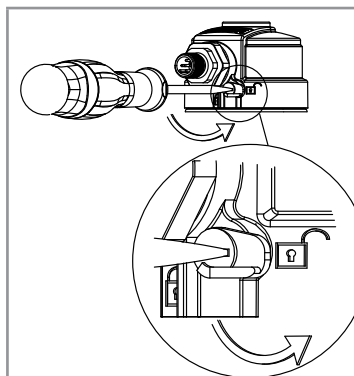

The connection box is fitted with a locking system.

- Using a screwdriver with a suitable head, turn the latch to the unlock position to unlock the connection box.

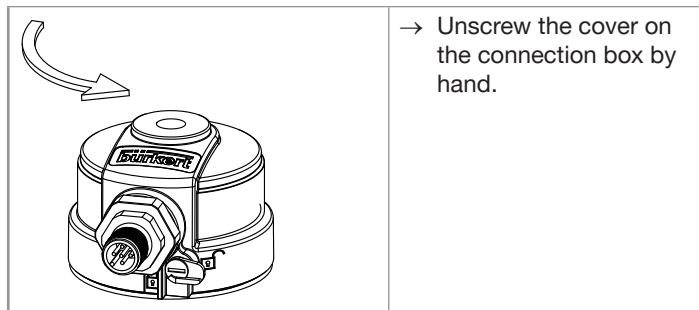


Fig. 7: Unscrewing the cover on the connection box

5.2. Fitting the cover to the connection box


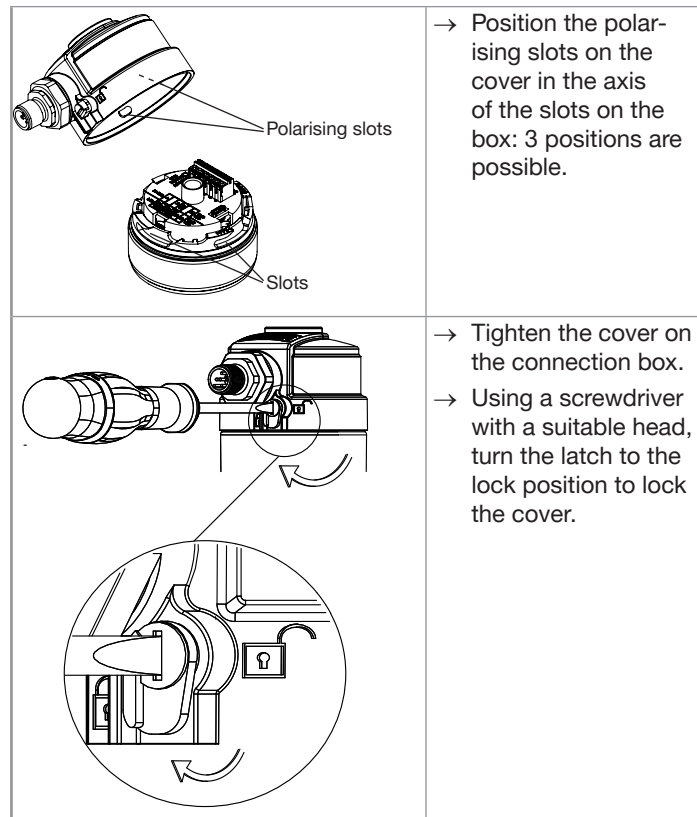


Fig. 8: Fitting the cover on the connection box

5.3. Installation on the pipe

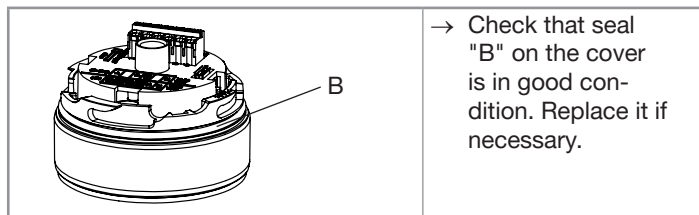

WARNING

Risk of injury if the dependency between the fluid pressure and the fluid temperature is not respected

- ▶ Take into account the dependency between the fluid pressure and the fluid temperature for the device variant. Refer to chapter 4.3.
- ▶ Observe the dependency between the fluid temperature and the fluid pressure for the fitting used or the adapter used. Refer to the related Operating Instructions.



If the conductivity is measured in liquids containing solids that may leave deposits in the bottom of the pipe, use installation position 1 (see Fig. 9).

- The device variant with a G 1 1/2" union nut can be installed on a pipe by means of a Type S022 adapter or fitting.
- The device variant with a G 3/4" external-threaded conductivity sensor can be installed on a pipe or a tank wall by means of an internal threaded adapter.

5.3.1. Device variant with a G 1 1/2" union nut

- Choose an appropriate position in the pipe to install the fitting. In Fig. 9, prefer mounting position "1" to install a device with conductivity sensor C=0.1 or C=0.01.
- Install the adapter or the fitting on the pipe according to the Operating Instructions of the adapter or fitting used.

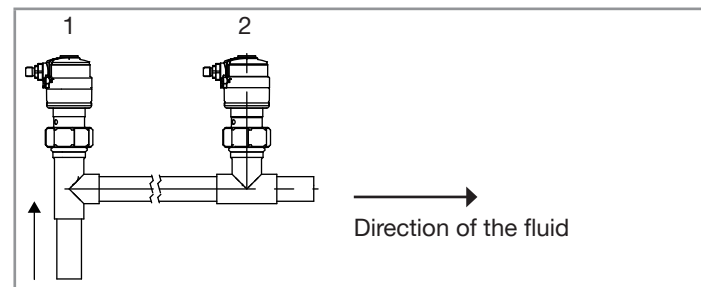


Fig. 9: Mounting positions of the fitting/device unit in the pipe

- Install the device on the fitting (see Fig. 10).

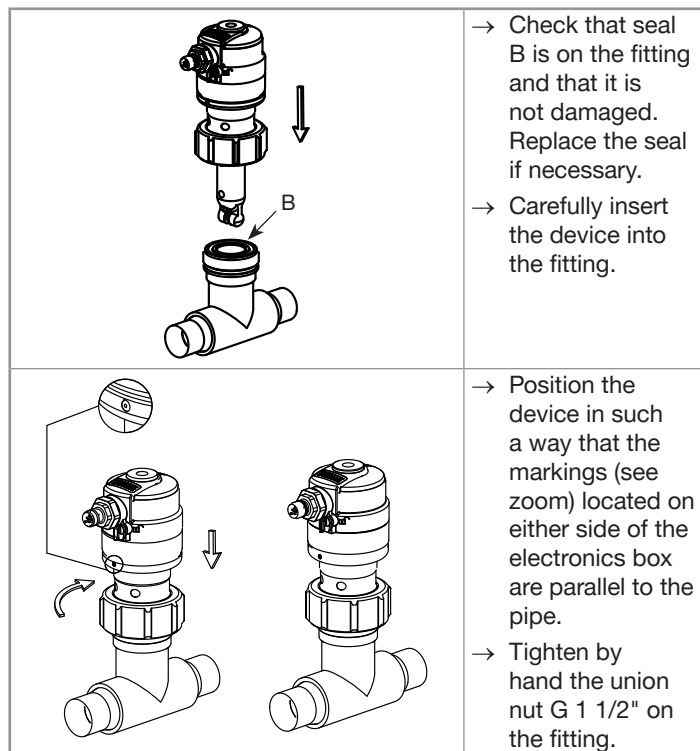


Fig. 10: Installation of the device into a fitting

5.3.2. Device variant with a G 3/4" external-threaded conductivity sensor

- Check that the seal is on the external-threaded conductivity sensor.
- Check the condition of the seal and replace it if necessary.
- Install the device on the pipe or the tank wall by means of an adapter that respects the threading jig from Fig. 11.

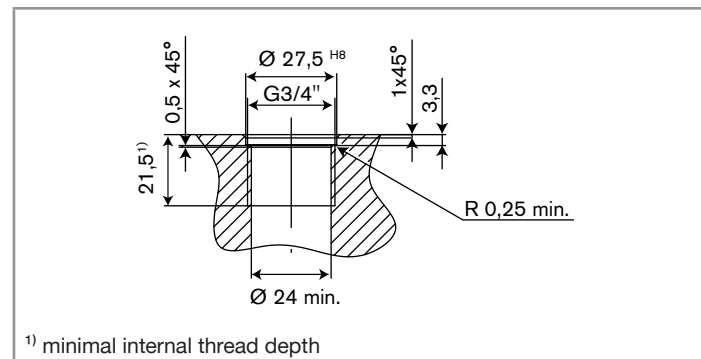



Fig. 11: Threading jig for the adapter [mm]

- Install the device into the adapter.
- Position the device in such a way that the markings (see zoom in Fig. 10) located on either side of the electronics box are parallel to the pipe.


6. ELECTRICAL INSTALLATION

To communicate in bÜS / CANopen or IO-Link, the following wiring must be done:

	bÜS / CANopen	IO-Link
	<ul style="list-style-type: none"> • Pin 1: CAN shield • Pin 2: 12...36 V DC • Pin 3: GND • Pin 4: CAN_H • Pin 5: CAN_L 	<ul style="list-style-type: none"> • Pin 1: L+ from voltage supply • Pin 2: Do not use • Pin 3: L- from voltage supply • Pin 4: C/Q • Pin 5: Do not use

The device automatically switches from bÜS to IO-Link according to the master wired to it.

If available, connect the grounding connector to the local earth.

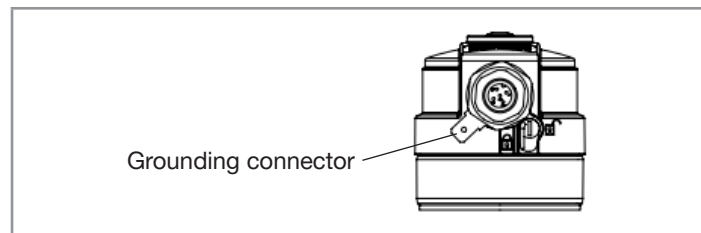

7. IO-LINK COMMUNICATION

The device can be used in bÜS or IO-Link communication systems and will automatically recognize the connected master.

The following elements are dedicated to the IO-Link communication aspects.

The conductivity sensor is equipped with an IO-Link interface which has to be connected to an IO-Link master and can be used to exchange process data, parameters, diagnostic information and status message.



More information on IO-Link is available at:

www.io-link.com

7.1. Safety instructions



DANGER

Risk of injury from electric shocks.

- ▶ Before working on the installation or product, switch off the power supply. Make sure that nobody can switch the power supply on.
- ▶ Observe all applicable accident protection and all applicable safety regulations for electrical equipment.

NOTICE

Risk of injury from improper operation

Improper operation can lead to injuries and damage to the product and its environment.

- ▶ Before commissioning, make sure that the operating personnel are familiar with, and fully understand the content of the Operating Instructions.
- ▶ Observe the safety information and the intended use.
- ▶ Only properly trained personnel may commission the installation and the product.
- ▶ Only properly trained personnel may change parameters with the help of the IO-Link master or the software Bürkert Communicator Type 8920. Refer to IO-Link instruction manual for associated safety instructions.

7.2. Communication table

Port Class	A
IO-Link specification	V1.1.2
Supply	via IO-Link (M12 x 1, 5-pin, A-coded)
SIO-Mode	No
IODD-File	see Internet
VendorID	0x0078, 120
DeviceID	see IODD file
ProductID	8222 Class A
Transmission speed	COM3 (230.4 kbit/s)
PD Input Bits	48
PD Output Bits	8
M-sequence Cap.	0x0D
Min. cycle time	5 ms
Data storage	Yes
Max. cable length	20 m

7.3. IODD

To ensure a proper work between the sensors and the Master IO-Link, the IO-Link system needs a description of the device parameters, such as output and input data, data format, data volume and supported transfer rate.

These data are available in the device master called IODD (for IO Device Description), provided to the IO-Link master when the communication system is commissioned.

Downloading the IODD:

- Go to web page country.burkert.com.
 - Select your country.
 - Click on continue the website.
 - Confirm or change cookie settings.
 - Enter the device type number, e.g. 8222 (see device nameplate) in the search field.
 - Click on the first result of the search.
 - In the area **Software** download the ZIP file **Device Description**.
 - Unpack the ZIP file (all or just the IODD file).
 - Identify and select the required IODD via IO-Link Device ID (see device nameplate).
- ✓ The IODD is now available for use with the IO-Link master's configuration tool. This can be used to configure and check the device.



Instead of the manufacturer's website, you can also use the address: ioddfinder.io-link.com.

7.4. Connection to the IO-Link master

If you are using a conventional IO-Link master, you must complete the following steps to configure the sensor.

- Start up the hardware and software for the IO-Link master.
- Load the sensor's device description file (IODD): see chapter 7.3 "Downloading the IODD".
- Start the configuration tool.
- Update the device catalog (import the IODD; localize using the "device ID" on the nameplate or the text file in the IODD collection).
- Create a new project.
- Establish a connection.
- Configure, extract, monitor, etc., the sensor.


7.5. Setting and operation in IO-Link

The following chapters and associated pictures illustrate the different functionalities which should be available on the IO-Link master after proper connection of the sensor.

! Several IO-Link masters are available on the market and can conduct to different graphical interfaces but the structure of the menus and sub-menus should remain the same. The illustrations below could therefore be different to those obtained with another IO-Link master.

7.5.1. Home page

The main page of the IO-Link master provides information on the IO-Link master used and to some general information on the sensor connected.

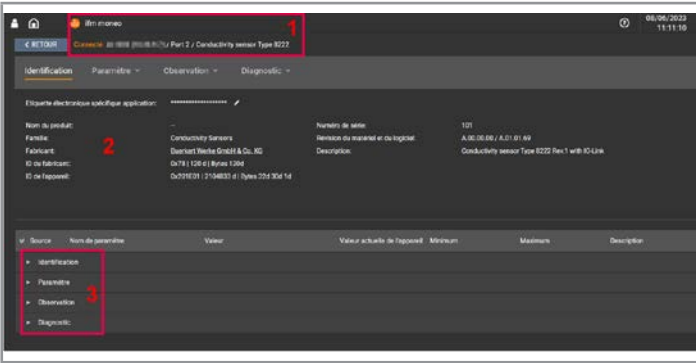

- Area 1 refers to the IO-Link master used and the sensor connected to it.
- Area 2 indicates general information related to the sensor.
- Area 3 corresponds to the different menus available for the sensor.

The menu is organized around 4 main topics:

- **Identification**, refer to chapter 7.5.2.
- **Parameter**, refer to chapter 7.5.3.
- **Observation**, refer to chapter 7.5.4.
- **Diagnostic**, refer to chapter 7.5.5.

Those menus are described hereafter.

7.5.2. Identification

The **Identification** menu provides access to read-only information related to the sensor.

Detailed view of the **Identification** menu:

Parameter	Description
Buerkert Device Description Object	
Name	Measurement type
Ident. number	Product article-number
Manufacture date	Product manufacturing-date
Firmware ident. number	Article number of the product software
Firmware version	Version number of the product software
Hardware version	Version number of the product hardware
Serial number	Product serial-number
Product type	Type of the product

7.5.3. Parameter

The **Parameter** menu provides access to the following functionalities:

- **Temperature compensation**
- **Measure values**
- **Events**
- **Calibration**
- **Simulation**
- **General settings**
- **Specialist**

Those menus are described hereafter.

Detailed view of the **Temperature compensation** submenu:

Setting	
Sensor parameters. Compensation type	<ul style="list-style-type: none"> • Off • Linear • NaCl • Ultra pure water
Sensor parameters. Linear compensation	

This section is used to deactivate the temperature compensation (by selecting **Off** or choose the type of temperature compensation to determine the conductivity of the fluid, to be chosen between a linear percentage or predefined curves (for NaCl, or

ultra pure water.)

To handle concentration table and temperature compensation and for more described elements, please refer to the corresponding chapter in büS (chapter [9.1](#)).

Detailed view of the **Measure values** submenu:

Setting	
Conductivity	
Temperature	
Concentration	
TDS	
Resistivity	

This section allows to set the following parameters for each listed measured value: filter response time and limits.

To handle measured values aspects and for more described elements, please refer to the corresponding chapter in büS (chapter [9.2](#)).

Detailed view of the **Events** submenu:

Setting	
Events. Sensor connection lost	<ul style="list-style-type: none">• Disabled• Enabled
Events. Factory data failure	<ul style="list-style-type: none">• Disabled• Enabled
Events. Temperature sensor failure	<ul style="list-style-type: none">• Disabled• Enabled

This section gives the possibility to activate or deactivate the monitoring of the listed events that could have an impact on the trueness of the values measured by the sensor.

To handle events aspects and for more described elements, please refer to the corresponding chapter in büS (chapter [9.3](#)).

Detailed view of the **Calibration** submenu:

Setting	
Calibration. Cell constant	
Calibration. Cell constant TDS	
Calibration. Temperature offset	
Reset to factory	

This section gives access to the following calibration coefficients:

- Cell constant
- Cell constant TDS
- Temperature offset

To handle calibration aspects and for more described elements, please refer to the corresponding chapter in büS (chapter [11.2](#)). Please note that 1-point calibration cannot be performed by the use of an IO-Link master. This has to be done through büS communication using a PC with the software Bürkert Communicator Type 8920.

Nevertheless different calibration constants (C, TDS) or temperature offset can be modified through the IO-Link interface.

For 1-point calibration and zero adjustment:

- Please refer to the corresponding chapters described hereafter for büS.
- For further information, refer to the Operating Instructions of the Type 8920.

Detailed view of the **Simulation** submenu:

Setting	
Simulation. Conductivity	<ul style="list-style-type: none"> • Inactive • Active
	Conductivity. Simulation value
Simulation. Temperature	<ul style="list-style-type: none"> • Inactive • Active
	Temperature. Simulation value
Simulation. TDS	<ul style="list-style-type: none"> • Inactive • Active
	TDS. Simulation value
Simulation. Resistivity	<ul style="list-style-type: none"> • Inactive • Active
	Resistivity. Simulation value

Simulation menu provides the possibility to simulate process values.

To handle simulation aspects and for more described elements, please refer to the corresponding chapter in bÜS (chapter [11.1](#)).

Detailed view of the **General settings** submenu:

Setting		
General settings	Reboot device	
	Reset to factory	
Status LED	Mode	Refer to bÜS, chapter 12.1 .
	Color	
Device temperature	Limits. Error low	Refer to bÜS, chapter 12.4 .
	Limits. Error high	
	Limits. Warning low	
	Limits. Warning high	
	Limits. Hysteresis	
Supply voltage	Limits. Error low	Refer to bÜS, chapter 12.4 .
	Limits. Error high	
	Limits. Warning low	
	Limits. Warning high	
	Limits. Hysteresis	
System bus		
Specialist	Application specific marking	

This section provides the possibility to reboot the sensor or to reset the sensor to factory settings. To handle Factory reset and for more described elements, please refer to the corresponding chapter in büS (chapter 9.4). This section allows also to interact on the Status LED, monitor device temperature and voltage and set associated error and warning limits.

The **Specialist** menu has no influence on the functionalities of the sensor and should not be modified.

7.5.4. **Observation**

The **Observation** menu provides read access to the following event status:

- Sensor connection error
- Factory data error
- Temperature sensor error

This section allows the possibility to read the status from the events. If those events are activated, associated error messages could be generated. Those messages are written in the logbook. The logbook cannot be displayed by the IO-Link master. Please use the software Bürkert Communicator Type 8920 to read the logbook (see chapter 13.4).

To handle those messages, please refer to the corresponding chapter in büS (chapter 18).



If the message displayed on your product is not explained in the Operating Instructions, contact Bürkert.

Detailed view of the **Observation** menu:

Setting	
Events. Sensor connection error	<ul style="list-style-type: none"> • Inactive • Active
Events. Factory data error	<ul style="list-style-type: none"> • Inactive • Active
Events. Temperature sensor error	<ul style="list-style-type: none"> • Inactive • Active

7.5.5. **Diagnostic**

The **Diagnostic** menu provides access to the following functionalities:

- Cell working time
- Sensor information
- Calibration limits
- Device status

All those submenus provide access to several categories of read-only values.

For more information on this menu, please refer to the corresponding chapter in büS (chapter 10).

Detailed view of the **Diagnostic** menu:

Parameter	
Sensor parameters. Cell working time	
Sensor information	Conductivity sensor variables. Hardware version
	Conductivity sensor variables. Serial number
	Conductivity sensor variables. Firmware version
	Conductivity sensor variables. Manufacture date
Calibration limits	Limits. Error high
	Limits. Error low
Device status	Status. Device status
	Status. Device temperature
	Status. Supply voltage
	Status. Operating duration
	Status. Max. temperature
	Status. Min. temperature
	Status. Max. supply voltage
	Status. Min. supply voltage
	Status. Calibration required
	Status. Device current

Parameter	
	Status. Maximum device current
	Status. Minimum device current
	Status. Device boot counter
	Status. Transferable memory status
	Status. Voltage drop counter
	Status. Operating period since last boot
Detailed device status	Current device status

8. BÜS COMMUNICATION

8.1. Safety instructions

NOTICE

Risk of injury from improper operation.

Improper operation can lead to injuries and damage to the product and its environment.

- ▶ Before commissioning, make sure that the operating personnel are familiar with, and fully understand the content of the Operating Instructions.
- ▶ Observe the safety information and the intended use.
- ▶ Only properly trained personnel may commission the installation and the product.
- ▶ Only properly trained personnel may change parameters with the help of the Bürkert software for display Type ME21, the EDIP process display Type ME61 or the software Bürkert Communicator Type 8920.



DANGER

Risk of injury from electric shocks.

- ▶ Before working on the installation or product, switch off the power supply. Make sure that nobody can switch the power supply on.
- ▶ Observe all applicable accident protection and all applicable safety regulations for electrical equipment.

8.2. Setting tools and setting software

The settings can be made with the following tools:

- a PC with the software Bürkert Communicator Type 8920 and the büS stick. To get general information about the Type 8920 software, refer to the Operating Instructions of the Type 8920.

The calibration functions of the device can be made with a 7" Process Control Display Type ME61. For more information about the calibration function with Type ME61, refer to chapter [15](#)). For more information about the Type ME61, refer to the Operating Instructions of the EDIP process display Type ME61.

8.3. Description of the user interface

The Operating Instructions of the product describe the following elements of the user interface:

- the user levels. Refer to chapter [8.4](#).
- the product functions. Each function has 3 menus. Refer to chapter [8.5](#).
- the **Logbook**, overview of the messages that are related to the product. Refer to chapter [13.4](#).

8.4. Available login user levels





The following 4 login user levels are available:



- the basic user level, which is the level with the least functions,
- the **Advanced User** user level,
- the **Installer** user level,
- the **Bürkert** user level.

By default, the product adjustment is protected by passwords.

Table 5 shows the symbol displayed in the information bar, depending on the user level that is active on the product, and what can be done with each type of user level.

Table 5: Possible login user levels

Symbol	User level	Description
	Basic user	<ul style="list-style-type: none"> • No password is required. • This level is active by default (and by default, password protection is switched off). • The menu items with the symbol  enable read-only access. • Not all the menu items that are available with a higher user level are displayed.
	Advanced user	<ul style="list-style-type: none"> • Password required, if the password protection is active. Default password is 5678. • The menu items with the symbol  enable read-only access. • Not all the menu items that are available with a higher user level are displayed.

Symbol	User level	Description
	Installer	<ul style="list-style-type: none"> • Password required, if the password protection is active. Default password is 1946. • All the available menu items can be adjusted.
	Bürkert	<ul style="list-style-type: none"> • Password required, if the password protection is active. • Only for Bürkert service.

→ For further information, refer to the Operating Instructions of the Type 8920.

8.5. Product functions and menus

The product has 2 functions and each function has 3 menus.

→ To access the product functions and the menus, refer to the Operating Instructions of the Type 8920.

The functions and menus are described in the following chapters:

- Function **Sensor**, menu **Parameter** in chapter 9.
- Function **Sensor**, menu **Diagnostics** in chapter 10.
- Function **Sensor**, menu **Maintenance** in chapter 11.
- Function **General setting**, menu **Parameter** in chapter 12.
- Function **General setting**, menu **Diagnostics** in chapter 13.
- Function **General setting**, menu **Maintenance** in chapter 14.

9. SENSOR – PARAMETER

→ Select device **Sensor 8222**.

→ Go to **Sensor** -----> **Parameter**.

Detailed view of the menu:

Setting		
Temperature compensation	Configure temperature compensation	
	Off	No compensation
	Linear	Linear compensation
	NaCl	Compensation for NaCl solution
	Ultra pure water	Compensation for Ultra pure water
Measure values	Configure filter response time and limits	
	Conductivity	
	Temperature	
	TDS	
	Resistivity	
Events	Enable / disable events notification	
	Sensor connection lost	
	Factory data failure	
	Temperature failure	
Reset to factory		

The menu items are detailed in the following chapters:

- **Temperature compensation**, refer to chapter [9.1](#).
- **Measure values**, refer to chapter [9.2](#).
- **Events**, refer to chapter [9.3](#).
- **Reset to factory**, refer to chapter [9.4](#).

9.1. Choosing the type of temperature compensation

See chapter [9](#) to access the **Parameters** menu.


This menu is used to deactivate the temperature compensation (choice **Off**) or choose the type of temperature compensation to determine the conductivity of the fluid:

- according to a linear percentage (choice **Linear**) (see details hereafter).
- or according to a predefined graph (**NaCl** or **Ultra pure water**).
The compensation graph **NaCl** is valid for the temperature range +10...+80 °C and a concentration of 0.2 %.

Linear temperature compensation (choice **Linear**)

The linear temperature compensation may be sufficiently precise for your process whenever the temperature of your process is always > 0 °C. Enter a compensation value between 0.00 and 9.99 %/°C.

Use the following graph and equation to calculate the average value of the compensation coefficient α according to a temperature range ΔT and the associated conductivity range $\Delta \chi$:

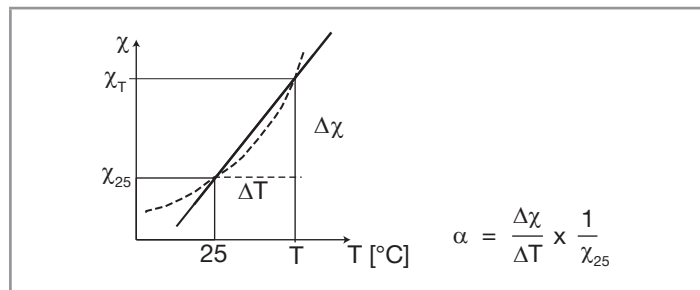

9.2. Setting parameter for each measured values

Measured value by the 8222 are:

- Conductivity
- Temperature
- TDS
- Resistivity

The menu **Measure values** allows to set the following parameters for each measured value:

- Filter response time
- Limits

9.2.1. Set the filter response time of a measured value

The filter makes it possible to filter the fluctuations of the measured values. Response time (in seconds) can be set by user for each measured value.

- Go to **Parameter** -----> **Measure values**.
- Select the measured value you want to configure.
- Go to **Filter response time**.
- Write the number of seconds of the response time.

9.2.2. Activating the monitoring of measured values

Because of a malfunction in the process or in the sensor, the measured values can be too high or too low.

A monitored value can be:

- in the normal operating range.
- in the warning range,
- in the error range.


You can set 4 limit values: 2 error limits and 2 warning limits.

→ To set the limit values, see chapter [9.2.4](#).

[Fig. 12, page 38](#) explains how the device reacts when the monitored value enters in another range (for example, from the normal range into the warning range). The reaction time depends on the hysteresis value and whether the monitored value increases or decreases.

By default, the monitoring of measured values is disabled, and the diagnostics are all enabled. To activate the monitoring of one of the measured values do the following:

- Go to **Sensor** -----> **Parameter** -----> **Measure values**
-----> [Name of the value you want to monitor] ----->
Limits -----> **Active**.
- Set value to **Active**.

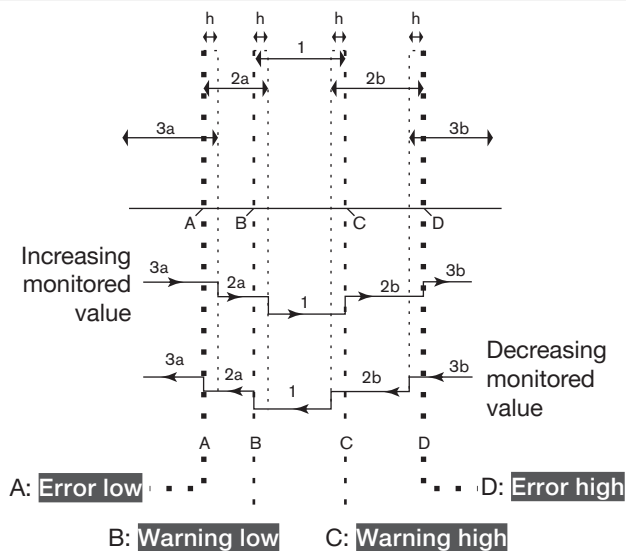

h: Value of the hysteresis. An hysteresis value that is equal to 0 means that the device reacts as soon as a limit is reached.

A: Low error limit (**Error low**)

B: Low warning limit (**Warning low**)

C: High warning limit (**Warning high**)

D: High error limit (**Error high**)

1: Normal range of the monitored value

2a: Lower warning range of the monitored value

3a: Lower error range of the monitored value

2b: Upper warning range of the monitored value

3b: Upper error range of the monitored value

Fig. 12: Operating principle of the monitoring with an hysteresis

Monitored value is in the	Colour of the device status indicator and generated message	Condition
Error range	Red ¹⁾ indicator, Failure message	<ul style="list-style-type: none"> if the monitored value was in the LOWER warning range and the LOW ERROR value is reached. if the monitored value was in the UPPER warning range and the HIGH ERROR value is reached.
Warning range	Yellow ¹⁾ indicator, Out of specification message	<ul style="list-style-type: none"> if the monitored value was in the LOWER error range and the LOW ERROR value + the HYSTERESIS value is reached. if the monitored value was in the normal range and the HIGH WARNING value is reached. if the monitored value was in the UPPER error range and the HIGH ERROR value minus the HYSTERESIS value is reached. if the monitored value was in the normal range and the LOW WARNING value is reached.
Normal range	<ul style="list-style-type: none"> White ¹⁾ indicator, no message, if the Diagnostics in the menu General settings – Parameter – Diagnostics are inactive (see chapter 12.5). or green ¹⁾ indicator, no message, if the Diagnostics in the menu General settings – Parameter – Diagnostics are active (see chapter 12.5). 	<ul style="list-style-type: none"> if the monitored value was in the LOWER warning range and the LOW WARNING value + the HYSTERESIS value is reached. if the monitored value was in the UPPER WARNING range and the HIGH WARNING value minus the HYSTERESIS value is reached.

¹⁾ If the operating mode of the device status indicator is set to NAMUR. See chapter 12.1.

9.2.3. Deactivating the monitoring of measured values

By default, the measured values are not monitored.

But if the monitoring of one of the measured values is active, do the following to deactivate it:

- Go to **Sensor** -----> **Parameter** -----> **Measure values** -----> [Name of the value you want to monitor] -----> **Limits** -----> **Active**.
- Set value to **Inactive**.

9.2.4. Changing the error limits, the warning limits and the hysteresis of the measured values

To change the error limits, the warning limits and the hysteresis of the measured value, do the following:

- Go to **Sensor** -----> **Parameter** -----> **Measure values** -----> [Name of the value you want to change] -----> **Limits** -----> **Settings**.
- The **Current settings** are displayed.
- Set the high error limit.
- Set the low error limit.
- Set the high warning limit.
- Set the low warning limit.
- Set the hysteresis value.

→ The **New settings** are displayed.

✓ The limit values and the hysteresis value are changed.

9.3. Configure reaction of the device to specific events

The device detects events that can have an impact on the trueness of the values measured by the sensor.

- Event Sensor connection lost
- Event Factory data failure
- Temperature sensor failure

More details concerning what causes the event and how to handle it are given in chapter 18.

The device gives the possibility for the customer to activate or deactivate the monitoring of each of these events.

9.3.1. Activating the monitoring of an event

By default, the monitoring of events is enabled, and the diagnostics are all enabled. But if the monitoring of one of the events is inactive, do the following to activate it:

- Go to **Sensor** -----> **Parameter** -----> **Events** -----> [Name of the value you want to monitor].
- Set value to **Enabled**.

9.3.2. Deactivating the monitoring of an event

By default, the events are monitored.

Do the following to deactivate it:

- Go to **Sensor** -----> **Parameter** -----> **Events** -----> [Name of the value you want to monitor].
- Set value to **Disabled**.

9.4. Resetting to factory default parameter data

See chapter 9 to access the **Parameters** menu. The following data can be restored to their default values:

- Temperature limits & filter response time
- Conductivity limits & filter response time
- Resistivity limits & filter response time
- TDS limits & filter response time
- Events diagnostic parameters
- Temperature compensation type
- Linear compensation

- Go to **Sensor** -----> **Parameter** -----> **Reset to factory**.
- Confirm.

10. SENSOR – DIAGNOSTICS

→ Select **Sensor 8222**.

→ Go to **Sensor** -----> **Diagnostics**.

The menu shows several categories of read only values.

Setting		
Calibration limits	Read calibration limits	
	Cell constant limits	Read accepted values for cell constant parameter
Measure values	Read measure values	
	Conductivity	
	Temperature	
	TDS	
	Resistivity	
Cell working time	Time since the cell has been powered	

11. SENSOR – MAINTENANCE

→ Select **Sensor 8222**.

→ Go to **Sensor** -----> **Maintenance**.

The menu shows the following sub menu:

- **Simulation**
- **Calibration**
- **Calibration schedule**
- **Reset to factory**

Setting		
Simulation	Simulate values on process values	
	Conductivity	
	Temperature	
	TDS	
	Resistivity	
Calibration	Sensor calibration	
	1 point	
	Cell constant	
	Cell constant	
	TDS	
	Temperature offset	
Calibration schedule	Configure calibration frequency reminders	

Setting		
	Interval in days	Configure numbers of days between two calibrations
	Last calibration	Read the date of the last successful calibration
	Next calibration	Read next calibration date
Reset to factory		

11.1. Checking the output behaviour

The feature allows for simulating the measurement of the process value to check if the outputs are correctly configured.

→ Go to **Sensor** -----> **Maintenance** -----> **Simulation** -----> **Process value**.

→ Select the process values to be tested between **Conductivity**, **Temperature**, **TDS**, **Resistivity**.

→ The possibility to write values on the selected values appears.

→ Write the constant values to simulate in the menu **Sensor** -----> **Maintenance** -----> **Simulation**.

11.2. Calibration

Calibrate the sensor using one of the following methods:

- **1 point calibration:** Calibrate the conductivity sensor by determining its specific C constant (see details hereafter). This calibration updates the cell constant, the last calibration date (Last calibration value in sub menu **Sensor** -----> **Maintenance** -----> **Calibration schedule**) and next calibration date (Next calibration value in sub menu **Sensor** -----> **Maintenance** -----> **Calibration schedule**).
- **Cell constant:** Enter the cell constant marked on the sensor nameplate or read the last cell constant determined by using the function **Calibration** above. This input does not update the calibration schedule data.
- **Cell constant TDS:** Enter the TDS factor suited to your process. The TDS factor allows for calculating the amount of Total Dissolved Solids (TDS), in ppm, depending on the measured conductivity. The default TDS factor is 0.46 (NaCl).
- **Temperature offset:** Enter the temperature offset to correct temperature measured.

11.2.1. 1 point calibration

Calibrate the conductivity sensor

Calibration consists in determining the C constant specific to each conductivity sensor using a solution with a known conductivity.

→ Go to **Sensor** -----> **Maintenance** -----> **Calibration** -----> **1 point**.



- Before each calibration, correctly clean the electrodes with a suitable product.
- Set the periodicity of calibrations in the **Interval in days** function in the sub-menu **Calibration schedule**: each time a calibration is due, the device generates a "maintenance" event and a message.

Follow the calibration procedure hereafter:

- Step 1/5: Immerse the clean conductivity sensor in the solution with a known conductivity. The device transmits:
 - the measured temperature of the solution.
 - the measured conductivity of the solution.
- Step 2/5: Enter the uncompensated conductivity, at the fluid temperature, of the reference solution used (marked on the bottle or measured using a reference instrument).
- Change the unit if necessary.
- Step 3/5: When the conductivity measurement is stable, select **Next**.
- Step 4/5: The device transmits the cell constant as calibration result.
 - To save the calibration result, select **Next**.
 - To discard the calibration result, select **Cancel**.
- Step 5/5: The calibration is completed.
- Select **Finish**.
- ✓ The new cell constant value is displayed.
- ✓ The date of the last calibration is updated.

The message **Error: out of range** signals that the cell constant is out of the authorized range (< 0.008 or > 12); this may be due to either:

- a mistake made when entering the uncompensated conductivity, or
- the conductivity sensor, which is not able to measure the solution conductivity.

11.2.2. Setting cell constant

To read or enter the cell constant value, go to **Calibration** -----> **Cell constant** menu.

11.2.3. Setting TDS cell constant

To read or enter the TDS factor, go to **Calibration** -----> **Cell constant TDS** menu.

11.2.4. Setting temperature offset

To read or enter the temperature offset, go to **Calibration** -----> **Temperature Offset**.

11.3. Configure calibration schedule

The calibration schedule menu gives access to several data:

- **Last calibration**: Gives the date of the last calibration made by the device. This value is updated automatically when a calibration wizard is done successfully.
- **Interval in days**: This value is configurable. When the interval value is 0, the function is deactivated.
- **Next calibration**: Last calibration + Interval in days. When the date of next calibration is reached, the device generates a "maintenance" event and a message.

To access these values, go to **Sensor** -----> **Maintenance** -----> **Calibration schedule**.

11.4. Resetting calibration data to factory default value

The following data can be restored to their default values:

- Cell constant
- Cell constant TDS
- Temperature offset
- Last calibration date
- Next calibration date

→ To reset these parameters to factory default, go to **Sensor** -----> **Maintenance** -----> **Reset to factory**.

→ Confirm.

12. GENERAL SETTINGS – PARAMETER

→ Select **Sensor 8222**.

→ Go to **General settings** -----> **Parameter**.

Detailed view of the menu:

Setting		
Status LED	Configure color and behavior of the device status LED	
	NAMUR mode	
	Fixed color	
	Demo mode	
	LED off	
büS	Configure büS interface	
	Displayed name	
	Location	
	Description	
	Advanced	
Alarm limits	Limits for warning and errors to be sent	
	Supply voltage	
	Device temperature	
Diagnostics	Activate / Deactivate diagnostics	
PDO configuration	Configuration of the cyclic process data objects	

12.1. Changing the operating mode of the device status indicator or switching off the device status indicator

By default, the device status indicator operates according to the NAMUR NE 107 standard (**NAMUR mode**).

The following other operating modes of the device status indicator are available:

- **Fixed color**: choose the permanent colour of the device status indicator.
- **LED off**: the device status indicator is always off.
- **Demo mode**: the LED of the device shows all NAMUR colours successively for 5 s.

12.1.1. Changing the operating mode of the device status indicator

To change the operating mode of the device status indicator, do the following:

→ Go to **General settings** -----> **Parameter** -----> **Status LED** -----> **Mode**.

→ Choose the operating mode of the device status indicator.

✓ The operating mode of the device status indicator is changed.

12.1.2. Switching off the device status indicator

To switch off the device status indicator, do the following:

→ Go to **General settings** -----> **Parameter** -----> **Status**
LED -----> **Mode**.

→ Select **LED off**.

✓ The device status indicator is always off.

12.2. Setting the basic parameters for identifying the device on bÜS

The **Displayed name**, the **Location** and the **Description** allow you to clearly identify the device on bÜS.

12.2.1. Entering a name for the device

The entered name will be shown on any display (e.g. the software Bürkert Communicator Type 8920) connected to bÜS.

To enter the name of the device that will be shown on any display connected to bÜS, do the following:

→ Go to **General settings** -----> **Parameter** -----> **bÜS**
-----> **Displayed name**.

→ Enter the name by selecting and confirming each character.

✓ The name is set.

12.2.2. Entering the location of the device

The entered location will be shown on any display (e.g. the software Bürkert Communicator Type 8920) connected to bÜS.

To enter the information where the device is geographically located, do the following:

→ Go to **General settings** -----> **Parameter** -----> **bÜS**
-----> **Location**.

→ Enter the location by selecting and confirming each character.

✓ The location is set.

12.2.3. Entering a description for the device

The description allows you to precisely identify this device. To enter a description for the device, do the following:.

→ Go to **General settings** -----> **Parameter** -----> **bÜS**
-----> **Description**.

→ Enter the description (max. 19 characters) by selecting and confirming each character.

✓ The description is set.

12.3. Setting the advanced parameters for identifying the device connected to bÜS or to a CANopen bus

12.3.1. Entering a unique name for the device



- Only change the **Unique device name** of a device if 2 devices with the same name are connected to bÜS or to a CANopen bus.
- If the **Unique device name** of the device is changed, the participants on bÜS or to a CANopen bus lose the link to the device. The link between the participants must then be restored.

The **Unique device name** of the device is used by the participants connected to bÜS or to a CANopen bus. To change the **Unique device name**, do the following:

- Go to **General settings** -----> **Parameter** -----> **bÜS** -----> **Advanced** -----> **Unique device name**.
- Enter the name by selecting and confirming each character.
- ✓ The unique name is set.

12.3.2. Changing the transmission speed on the device

The transmission speed for the communication on the fieldbus (both bÜS or CANopen) must be the same for all the participants of the fieldbus.

By default, the transmission speed of the device is 500 kbit/s. This transmission speed is suited for a maximum cable length of 50 m.

If the cable length is higher, reduce the transmission speed of all the participants.

To change the transmission speed of the device, do the following:

- Go to **General settings** -----> **Parameter** -----> **bÜS** -----> **Advanced** -----> **Baudrate**.
- Choose the transmission speed.

✓ The transmission speed of the device is changed. To take the transmission speed into account, restart the device.

12.3.3. Changing the address of the device connected to a CANopen bus

The address of the device is used by bÜS or the CANopen fieldbus the device can be connected to.

- If the device is connected to bÜS, bÜS automatically addresses the device. By default, the address of the device on bÜS is 30.
 - If the device is connected to a CANopen fieldbus, the addresses are not set automatically.
- Make sure that each participant, including the device, connected to the CANopen fieldbus has a specific address.

If the device is connected to a CANopen fieldbus and another participant connected to the fieldbus has the same address, do the following to change the address of the device:

- Go to **General settings** -----> **Parameter** -----> **bÜS** -----> **Advanced** -----> **Fixed CANopen address (Node ID)**.
- Change the address of the device. Make sure you enter an address that is not already used on the same CANopen fieldbus.
- ✓ The address of the device is changed.
- Start the device to take the new address into account.

12.3.4. Setting the digital communication for bÜS or for a CANopen bus

By default, the operating mode of the digital communication is set to **bÜS** and the measured process data (PDOs, process data objects) are sent on a connected fieldbus.

The other operating modes of the digital communication are **Standalone** or **CANopen**.

If the device is connected to Standalone or to a CANopen bus, do the following to change the operating mode of the digital communication:

- Go to **General settings** -----> **Parameter** -----> **bÜS** -----> **Advanced** -----> **Bus mode**.
- Choose **bÜS** or **CANopen**.
- Restart the device.

- ✓ The operating mode of the digital communication is bÜS or CANopen.
- ✓ If the operating mode of the digital communication is bÜS, the **CANopen status** is set to **Operational** (see chapter 13.2) and the PDOs are sent to bÜS.
- ✓ If the operating mode of the digital communication is CANopen, the **CANopen status** is set to **Pre-op** (see chapter 13.2) until the CANopen network master switches the device to **Operational**.
- To stop the PDOs being sent to bÜS or to a fieldbus, see chapter 12.3.5.

12.3.5. Stop sending the measured process data (PDOs) to bÜS or to the CANopen fieldbus

If the device is connected to bÜS or to a CANopen fieldbus and the **Bus mode** is set to **bÜS** or to **CANopen** and you want to temporarily stop sending the PDOs to bÜS or to the CANopen fieldbus, do the following:

→ Go to **General settings** -----> **Parameter** -----> **bÜS**
-----> **Advanced** -----> **Bus mode.**

→ Select **Standalone.**

→ Restart the device.

✓ The **CANopen status** is set to **Pre-op** and the PDOs are not sent to bÜS or to a CANopen fieldbus.

✓ The communication with the software Bürkert Communicator Type 8920 is still operational.

→ To enable the transmission of the PDOs to bÜS or to a fieldbus, see chapter [12.3.4.](#)

12.4. Monitoring the supply voltage or the device temperature

The supply voltage of the device and the internal temperature of the device are monitored.

A monitored value can be:

- in the normal operating range,
- in the warning range,
- in the error range.

4 limit values are set, 2 error limits and 2 warning limits. The error limits can only be read but the warning limits can be adjusted.

[Fig. 12, page 38](#) explains how the device reacts when the monitored value enters into another range (for example, from the normal range into the warning range). The reaction time depends on the hysteresis value and on whether the monitored value increases or decreases.

12.4.1. Reading out the 2 error limit values

To read out the limits the supply voltage of the device should be in, do the following:

- Go to **General settings** -----> **Parameter** -----> **Alarm limits**.
- Choose **Supply voltage** or **Device temperature**.
- Choose **Error high** or **Error low**.

12.4.2. Changing the 2 warning limit values

To change the warning limits of the supply voltage or of the device temperature, do the following:

- Go to **General settings** -----> **Parameter** -----> **Alarm limits**.
- Choose **Supply voltage** or **Device temperature**.
- Choose **Warning high** or **Warning low**.
- Set the warning limit.

✓ The warning limits are changed.

12.4.3. Reading out the hysteresis value

To read out the hysteresis value, do the following:

- Go to **General settings** -----> **Parameter** -----> **Alarm limits**.
- Choose **Supply voltage** or **Device temperature**.
- Select **Hysteresis**.

12.5. Activating the diagnostics function



WARNING

Risk of injury due to non-conforming adjustment.

Non-conforming adjustment could lead to injuries and damage the device and its surroundings.

- ▶ The operators in charge of adjustment must have read and understood the contents of the Operating Instructions.
- ▶ In particular, observe the safety recommendations and intended use.
- ▶ The device/installation must only be adjusted by suitably trained staff.

By default, all the diagnostics events related to the process, the electronics or the sensor, the messages related to the monitoring of the process values (e.g. the conductivity) and the messages related to problems on the device and on bus are enabled.

If the diagnostics are inactive on the device, do the following to enable them:

→ Activate the monitoring of the process values that must be monitored. See chapter 9.2.2, chapter 9.3.1.

→ Go to **General settings** -----> **Parameter** -----> **Diagnostics**.

→ Read the displayed message.

→ Select **On**.

→ Restart the device.

✓ The needed diagnostics are active.

12.6. Disabling all the diagnostics

By default, all the diagnostics events related to the process, the electronics or the sensor, the messages related to the monitoring of the process values (e.g. the flow rate) and the messages related to problems on the device and on bÜS are enabled.

To disable the diagnostics, do the following:

→ Go to **General settings** -----> **Parameter** -----> **Diagnostics**.

→ Read the displayed message.

→ Select **Off**.

→ Restart the device.

✓ All the diagnostics are disabled.

12.7. PDOs configuration

12.7.1. Set the transmission time between 2 values of a PDO

The process data objects (PDO) are cyclic data sent from the product to the other participants of the fieldbus or received by the product from other participants to the fieldbus.

The transmission time between 2 values of a PDO is described by the 2 following parameters:

- the value of the parameter **Event timer** is the time after which the product sends the value of the same PDO, even if the value did not change. It enables a periodical transmission of the PDO.
- the value of the parameter **Inhibit time** is the minimum time between the sending of 2 different PDOs.

12.7.2. Restore all PDOs to their default values

Make sure that the login user level is **Installer**. Refer to chapter 8.4.

→ Go to **General settings** -----> **Parameter**.

→ Select **PDO configuration**.

→ Select **Reset to default values**.

✓ The PDOs are set to their default values.

13. GENERAL SETTINGS – DIAGNOSTICS

→ Select **Sensor 8222**.

→ Go to **General settings** -----> **Diagnostics**.

Setting	
Device status	Read device status information
	Operating duration
	Operating period since last reboot
	Device temperature
	Supply voltage
	Current consumption
	Voltage drops
	Min/Max values
	Device boot counter
	Transferable memory
	Current system time
büS status	Read büS status information
	Receive errors
	Receive errors max
	Transmit errors
	Transmit errors max
	Reset errors counter
	CANopen status

Setting	
Logbook	Read book of events

13.1. Reading out device status information

The device allows to read out the following device status information:

- **Operating duration**: time in s since first power up of the device.
- **Operating period since last reboot**: time in s since last reboot of the device.
- **Device temperature**: temperature measured by the device.
- **Supply voltage**: current supply voltage.
- **Current consumption**: current consumption of the device in A.
- **Voltage drops**: count of voltage drops since last reboot.
- **Min/Max values**: minimum and maximum values of temperature and supply voltage measured by the device.
- **Device boot counter**: number of reboot made by the device.
- **Transferable memory status**: signal if a device to which the memory could be transferred is available on the device.
- **Current system time**: current date.

13.2. Reading out bÜS status information

The device allows to read the following bÜS status information:

- **Receive errors:** Number of receive errors
- **Receive errors max:** Maximum number of receive errors since last reset of the max error counters
- **Transmit errors:** Number of transmit errors
- **Transmit errors max:** Maximum number of transmit errors since last reset of the max error counters
- **CANopen status:**
 - If the CANopen status is **Operational**, the PDOs are sent to bÜS.
 - If the CANopen status is **Pre-op** (pre-operational), the PDOs are not sent on bÜS or on the CANopen fieldbus and a message is generated in the message list. For example, the Pre-op status is active if the Bus mode is set to **Standalone** (see chapter [12.3.4](#)).

13.3. Resetting errors counter

By running the wizard reset errors counter, the device resets maximum number of receive errors and maximum number of transmit errors.

13.4. Read the generated events

To read the events that are related to the product, do the following procedure:

→ Go to **General settings** ----> **Diagnostics**.







→ Select **Logbook**.

✓ The events that are related to the product are displayed.

The events are displayed on the screen.

[Table 6, page 54](#) shows the existing types of events and the symbols associated to the types.

Table 6: *Description of the symbols*

Symbol	Status	Description
	Failure, error or fault	Malfunction
	Function check	Ongoing work on the product. For example, simulating measurement values.
	Out of specification	At least one of the monitored parameters is outside its monitored limits.
	Maintenance required	The product is in controlled operation; however, the function is briefly restricted. → Do the required maintenance operation.
	Diagnostics active and no event has been generated	Status changes are shown in colour. Messages are listed and possibly transmitted through any connected fieldbus.
	Diagnostics inactive	Status changes are not shown. Messages are neither listed nor transmitted through any connected fieldbus.

Detailed description of the events stored in logbook and how to handle them is described in chapter [18](#).

14. GENERAL SETTINGS – MAINTENANCE

- Select **Sensor 8222**.
- Go to **General settings** -----> **Maintenance**.
- Select **Device information**. The menu shows only read-only values. [Table 7](#) shows the values.

Table 7: Description of the parameters

Parameter		Description
Ident. number		Product article-number
Serial number		Product serial-number
Firmware ident. number		Article number of the product software
Firmware version		Version number of the product software
büS version		büS version-number
Hardware version		Version number of the product hardware
Product type		Type of the product
Manufacture date		Product manufacturing-date
EDS version		EDS version-number
Device driver	Driver version	Version number of the product driver
	Firmware group	Product name and EDS version-number
	Origin	Path to the driver file

Parameter		Description
Measurement board	Hardware version	Sensor information
	Serial number	
	Firmware version	
	Manufacture date	

14.1. Restart the product

- Make sure that the login user level is **Installer**. Refer to chapter [8.4](#).
- Go to **General settings** -----> **Maintenance**.
- Select **Reset device** -----> **Restart**.
- To cancel the procedure, select **Cancel**.
- To restart the product, select **Next**.
- ✓ The product restarts.

Type 8222 ELEMENT neutrino

Calibrate the device with a 7" Process Control Display type ME61

14.2. Reset the product to its factory settings

To reset the product to all its factory settings, do the following procedure:

- Make sure that the login user level is **Installer**. Refer to chapter 8.4.
 - Go to **General settings** -----> **Maintenance**.
 - Select **Reset device** -----> **Reset to factory settings**.
 - To cancel the procedure, select **Cancel**.
 - To reset the product to its factory settings, select **Next**.
- ✓ The product restarts and the product is reset to all its factory settings.

15. CALIBRATE THE DEVICE WITH A 7" PROCESS CONTROL DISPLAY TYPE ME61

15.1. Safety instructions



DANGER

Risk of injury from electric shocks.

- Before working on the installation or product, switch off the power supply. Make sure that nobody can switch the power supply on.
- Observe all applicable accident protection and all applicable safety regulations for electrical equipment.

NOTICE

Risk of injury from improper operation.

Improper operation can lead to injuries and damage to the product and its environment.

- Before commissioning, make sure that the operating personnel are familiar with, and fully understand the content of the Operating Instructions.
- Observe the safety information and the intended use.
- Only properly trained personnel may commission the installation and the product.

NOTICE

Improper operation can lead to injuries and damage to the product and its environment.

- Only properly trained personnel may change parameters with the help of the 7" Process Control Display Type ME61 or the software Bürkert Communicator Type 8920.

15.2. Parametrizing the calibration function

The adjustment of the product can be made:

- either with the 7" Process Control Display Type ME61, communicating with the device with a bÜS (Bürkert bus) cable,
- or with a PC and the software Bürkert Communicator Type 8920. To get general information about the software Type 8920, refer to the Operating Instructions of the Type 8920.

The calibration functionality cannot be handled with the 3" Process View Display Type ME61.

15.2.1. Preparation for defining the calibration action on the 7" Process Control Display Type ME61

To do the setting of the calibration action, define a system as shown in Fig. 13.

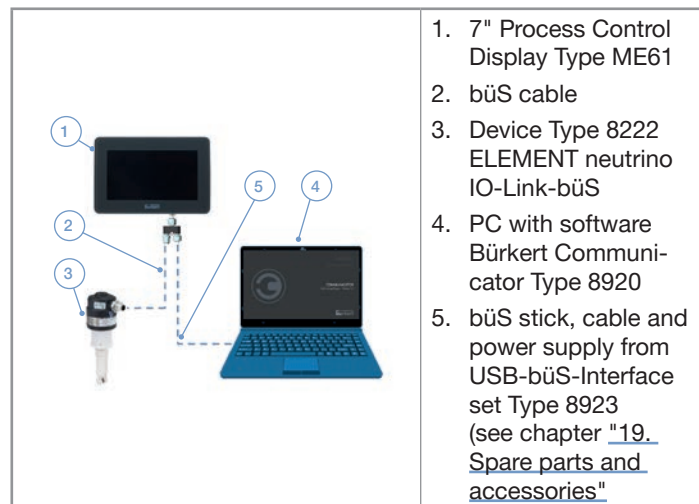


Fig. 13: Example of arrangement for setting the calibration action on the 7" Process Control Display Type ME61

The setting of the calibration action requires a PC with the software Bürkert Communicator Type 8920 but the calibration action will be afterwards accessible directly by the 7" Process Control Display Type ME61 without using a PC and the software Bürkert Communicator software Type 8920.


Type 8222 ELEMENT neutrino

Calibrate the device with a 7" Process Control Display type ME61


15.2.2. Defining a displayed process value

Before engaging the setting of the calibration action, make sure that a process value of the sensor is defined and displayed by the 7" Process Control Display Type ME61. For more information, refer to the Operating Instruction of the Type ME61.


If no process value of the sensor is defined or displayed, do the following steps:

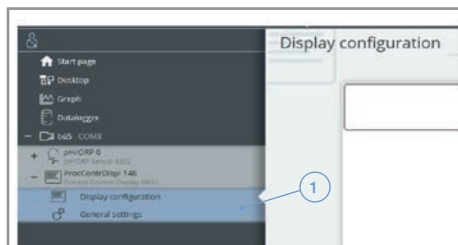

1. Select the Display configuration of the 7" Process Control Display Type ME61

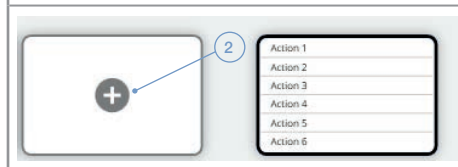

2. Click on "+" to add view(s)

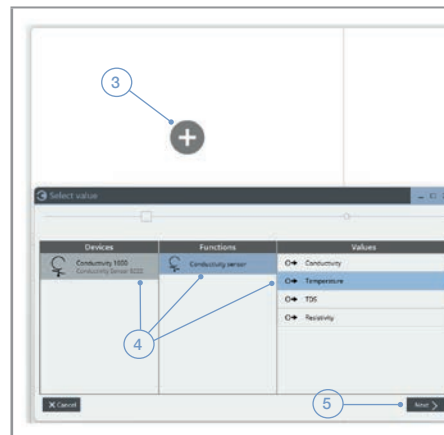

3. Select "+" on the desired view
4. Select the device, the function and the value to be displayed
5. Click on "Next"

Type 8222 ELEMENT neutrino

Calibrate the device with a 7" Process Control Display type ME61

	<p>6. Define the unit of the parameter to be displayed and define the number of decimal point</p> <p>7. Validate with "Finish"</p>
	<p>8. Click on "Apply changes" to transmit the changes to the display.</p> <p>✓ The 7" Process Control Display Type ME61 restart.</p>

15.2.3. Configuring the calibration action

Before engaging the setting of the calibration action, make sure that a process value of the sensor is defined and displayed by the 7" Process Control Display Type ME61. Refer to chapter 15.2.2.

To properly set the calibration action, do the following steps:

- Make sure that all the components are connected to the bus.
- Make sure that the software Bürkert Communicator Type 8920 is open and connected to the system.

	<p>1. Select the 7" Process Control Display Type ME61 in the list of products</p>
	<p>2. Select the action menu of the display</p>
	<p>3. Select "+"</p>

Type 8222 ELEMENT neutrino

Calibrate the device with a 7" Process Control Display type ME61

	<p>4. Select the window "Use predefined action from available device"</p> <p>5. Click on "Next"</p>
	<p>6. Select the device</p> <p>7. Select "Calibration" in the actions list</p> <p>8. Click on "Next"</p>
	<p>9. Define the name of the action (e.g. "Calibration").</p> <p>10. Click on "Finish"</p>

	<p>11. The name of the defined action is visible.</p> <p>12. Click on "Apply changes" to transmit the changes to the display.</p> <p>✓ The 7" Process Control Display Type ME61 restart.</p>
--	--


15.2.4. Using the calibration menu on the 7" Process Control Display Type ME61

Once the 7" Process Control Display Type ME61 is configured (see chapter [15.2.1](#)), the calibration action is available without any connection to a PC and the software Bürkert Communicator Type 8920:

Type 8222 ELEMENT neutrino

Calibrate the device with a 7" Process Control Display type ME61



1. Select "Actions"
2. Perform action by pressing button 

The type of measurement will be visible on the top-left-hand corner of the screen (see Fig. 14)

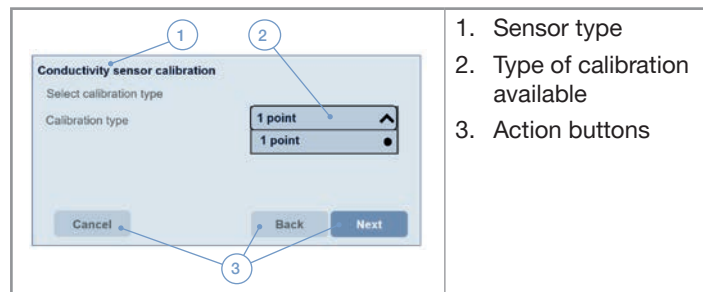


Fig. 14: Conductivity calibration type selection on the 7" Process Control Display Type ME61

Select the type of calibration to be performed and follow the displayed steps.

- Press the "Next" button to go to the next step
- Press the "Back" button to return to the previous step
- Press the "Cancel" button to cancel the on-going calibration procedure.

For more information on the 1 point calibration to be applied on a conductivity sensor, refer to chapter [11.2.1](#).

At the end of the calibration procedure, a validation screen displays the parameters to be considered as output of the calibration procedure. See [Fig. 15](#).

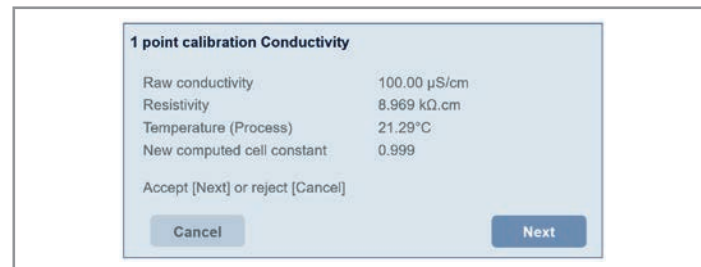


Fig. 15: Validation screen of the conductivity calibration procedure

→ Select "Next" to validate or select "Cancel" to return to the previous step. No changes can be done anymore after this point.

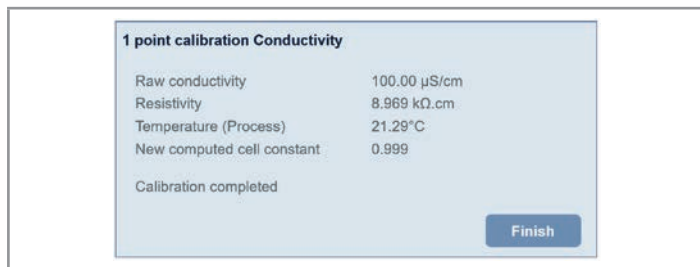


Fig. 16: Final screen of the conductivity calibration procedure

- Select **Finish** to complete the calibration procedure.
- If troubleshooting or if a message displayed on your product is not explained in the Operating Instructions, contact Bürkert.

16. PROCESS DATA OBJECTS

The participants to bÜS or to a CANopen fieldbus use process data objects (PDOs) to communicate the cyclic data.

16.1. Transmitted PDOs

The PDOs that are transmitted by the product are described in [Table 8](#). The structure of the PDO3 is detailed in [chapter 16.2](#).

Table 8: PDOs transmitted by the product

Number	Name	Index	Data type	Unit SI	Range
PDO1	Temperature	0x2500	REAL32	K	253...398 K
	Conductivity	0x2501	REAL32	S/m	0...10 S/m
PDO2	Resistivity	0x2503	REAL32	Ohm.m	0...2000000
	TDS	0x2502	REAL32	g/l	0...100
PDO3	Namur status	0x2509	UNSIGNED8	-	-

16.2. Structure of the PDO3

The PDO3 uses 1 byte. The PDO3 indicates the NAMUR status of the device ([Table 9](#)).

Table 9: Device status indicator in accordance with NAMUR NE 107, edition 2006-06-12

Colour according to NE 107	Decimal value of PDO3 (for a PLC)	Diagnostics event according to NE 107	Meaning
Red	5	Failure, error or fault	Due to a malfunction of the device or its periphery, the measured values can be incorrect.
Orange	4	Check function	Ongoing work on the device (for example, checking the correct behaviour of the outputs by simulating measurement values); the output signal is temporarily invalid (e.g. frozen).
Yellow	3	Out of specification	The ambient conditions or process conditions for the device are outside the permitted ranges. Device-internal diagnostics point to problems in the device or with the process properties.
Blue	2	Maintenance required	The device continues to measure but a function is temporarily restricted. → Do the required maintenance operation.
Green	1	-	Diagnostics are active and no diagnostics event has been generated.
White	0	-	Diagnostics are inactive.

17. MAINTENANCE



WARNING

Risk of injury due to nonconforming maintenance.

- ▶ Maintenance must only be carried out by qualified and skilled staff with the appropriate tools.
- ▶ Ensure that the restart of the installation is controlled after any interventions.

17.1. Cleaning the device



- During cleaning of the conductivity sensor, take care not to scratch its surface.
- Store the conductivity sensor dry.

The device can be cleaned with a cloth dampened with water or a detergent compatible with the materials the device is made of.

→ Regularly check if the conductivity sensor is dirty; clean it if necessary using a compatible product.

Please feel free to contact your Bürkert supplier for any additional information.

18. TROUBLESHOOTING

Messages can only be generated if the diagnostics are enabled. Refer to chapter [12.5](#).

When a message is generated, the following actions are carried out:


- The message is written in the logbook.
- The product-status indicator changes its colour and state based on the NAMUR NE 107 recommendation. Refer to chapter [16.2](#).

→ To read the message, open the logbook. Refer to chapter [13.4](#).


18.1. Messages : failure, error or malfunction

→ If the message displayed on your product is not explained in the Operating Instructions, contact Bürkert.


18.1.1. Message **büS is not operational**

Product-status symbol	
Possible cause	Unknown cause
What to do?	<p>→ Restart the product.</p> <p>→ If the message is still displayed, send the product back to Bürkert.</p>


18.1.2. Message **Factory data failure**

Product-status symbol	
Possible cause	Unknown cause
What to do?	→ Restart the product. → If the message is still displayed, send the product back to Bürkert.


18.1.3. Message **Temperature failure**

Product-status symbol	
Possible cause	Unknown cause
What to do?	→ Restart the product. → If the message is still displayed, send the product back to Bürkert.


18.1.4. Message **Sensor connection lost**

Product-status symbol	
Possible cause	Unknown cause
What to do?	→ Restart the product. → If the message is still displayed, send the product back to Bürkert.


18.1.5. Message **Error: too low Conductivity**

Product-status symbol	
Possible cause	The Conductivity value of the water sample is under the set limit. The message can only be displayed if the monitoring of the Conductivity value has been configured and activated.
What to do?	→ Check the process or check the configured limits.


18.1.6. Message **Error: too high Conductivity**

Product-status symbol	
Possible cause	The Conductivity value of the water sample is above the set limit. The message can only be displayed if the monitoring of the Conductivity value has been configured and activated.
What to do?	→ Check the process or check the configured limits.


18.1.7. Message **Error: too low temperature**

Product-status symbol	
Possible cause	<p>The temperature value of the water sample is under the set limit.</p> <p>The message can only be displayed if the monitoring of the temperature value has been configured and activated.</p>
What to do?	→ Check the process or check the configured limits.


18.1.8. Message **Error: too high temperature**

Product-status symbol	
Possible cause	<p>The temperature value of the water sample is above the set limit.</p> <p>The message can only be displayed if the monitoring of the temperature value has been configured and activated.</p>
What to do?	→ Check the process or check the configured limits.


18.1.9. Message **Error: too low TDS**

Product-status symbol	
Possible cause	<p>The TDS value of the reference electrode is under the set limit.</p> <p>The message can only be displayed if the monitoring of the TDS value has been configured and activated.</p>
What to do?	→ Check the process or check the configured limits.


18.1.10. Message **Error: too high TDS**

Product-status symbol	
Possible cause	<p>The TDS value of the reference electrode is above the set limit.</p> <p>The message can only be displayed if the monitoring of the TDS value has been configured and activated.</p>
What to do?	→ Check the process or check the configured limits.

18.1.11. Message **Error: too low Resistivity**

Product-status symbol	
Possible cause	The Resistivity of the measuring cell is under the set limit. The message can only be displayed if the monitoring of the Resistivity has been configured and activated.
What to do?	→ Check the process.


18.1.12. Message **Error: too high Resistivity**

Product-status symbol	
Possible cause	The Resistivity of the measuring cell is above the set limit. The message can only be displayed if the monitoring of the Resistivity has been configured and activated.
What to do?	→ Check the process or check the configured limits.

18.2. Messages : function check

→ If the message displayed on your product is not explained in the Operating Instructions, contact Bürkert.


18.2.1. Message **Simulation mode active**

Product-status symbol	
Possible cause	You are checking the correct behaviour of the system or of the product.
What to do?	→ If you have finished to check the behaviour of the system or of the product, set the parameter Simulation ----→ Status to Off .


18.3. Messages : out of specification

→ If the message displayed on your product is not explained in the Operating Instructions, contact Bürkert.


18.3.1. Message **Warning: too low Conductivity**

Product-status symbol	
Possible cause	The Conductivity of the water sample is under the set limit. The message can only be displayed if the monitoring of the Conductivity has been configured and activated.
What to do?	→ Check the process or check the configured limits.


18.3.2. Message **Warning: too high Conductivity**

Product-status symbol	
Possible cause	The Conductivity of the water sample is above the set limit. The message can only be displayed if the monitoring of the Conductivity has been configured and activated.
What to do?	→ Check the process or check the configured limits.


18.3.4. Message **Warning: too high temperature**

Product-status symbol	
Possible cause	The temperature value of the water sample is above the set limit. The message can only be displayed if the monitoring of the temperature value has been configured and activated.
What to do?	→ Check the process or check the configured limits.


18.3.3. Message **Warning: too low temperature**

Product-status symbol	
Possible cause	The temperature value of the water sample is under the set limit. The message can only be displayed if the monitoring of the temperature value has been configured and activated.
What to do?	→ Check the process or check the configured limits.


18.3.5. Message **Warning: too low TDS**

Product-status symbol	
Possible cause	The TDS value of the reference electrode is under the set limit. The message can only be displayed if the monitoring of the TDS value has been configured and activated.
What to do?	→ Check the process or check the configured limits.


18.3.6. Message **Warning: too high TDS**

Product-status symbol	
Possible cause	The TDS value of the reference electrode is above the set limit. The message can only be displayed if the monitoring of the TDS value has been configured and activated.
What to do?	→ Check the process or check the configured limits.

18.3.7. Message **Warning: too low Resistivity**

Product-status symbol	
Possible cause	The Resistivity of the measuring cell is under the set limit. The message can only be displayed if the monitoring of the Resistivity has been configured and activated.
What to do?	→ Check the process or check the configured limits.


18.3.8. Message **Warning: too high Resistivity**

Product-status symbol	
Possible cause	The Resistivity of the measuring cell is above the set limit. The message can only be displayed if the monitoring of the Resistivity has been configured and activated.
What to do?	→ Check the process or check the configured limits.

18.4. Messages : maintenance required

→ If the message displayed on your product is not explained in the Operating Instructions, contact Bürkert.

18.4.1. Message **Calibration date has expired**

Product-status symbol	
Possible cause	• The calibration date is due.
What to do?	→ Calibrate the product. Refer to chapter 11.2 .

19. SPARE PARTS AND ACCESSORIES



CAUTION

Risk of injury and damage caused by the use of unsuitable parts.

Incorrect accessories and unsuitable replacement parts may cause injuries and damage the device and the surrounding area.

- Use only original accessories and original replacement parts from Bürkert.

Spare part	Article number
EPDM seal for the G 3/4" external-threaded conductivity sensor	561955
EPDM seal for the tightness between the cover and the housing	561752

Accessories	Article number
Calibration solution, 300 ml, 5 µS	440015
Calibration solution, 300 ml, 15 µS	440016
Calibration solution, 300 ml, 100 µS	440017
Calibration solution, 300 ml, 706 µS	440018
Calibration solution, 300 ml, 1413 µS	440019
Type 8923 - USB-büS Interface Set	772426

20. PACKAGING, TRANSPORT

NOTICE

Damage due to transport

Transport may damage an insufficiently protected device.

- Transport the device in shock-resistant packaging and away from humidity and dirt.
- Do not expose the device to temperatures that may exceed the admissible storage temperature range.
- Protect the electrical interfaces using protective plugs.

21. STORAGE

NOTICE

Poor storage can damage the device.

- Store the device in a dry place away from dust.
- Storage temperature: -10...+60 °C.

22. DISPOSAL

Environmentally friendly disposal



- Follow national regulations regarding disposal and the environment.
- Collect electrical and electronic devices separately and dispose of them as special waste.

Further information at country.burkert.com.

country.burkert.com